

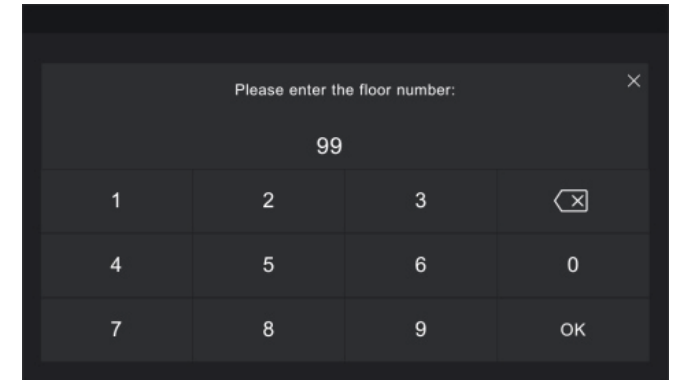
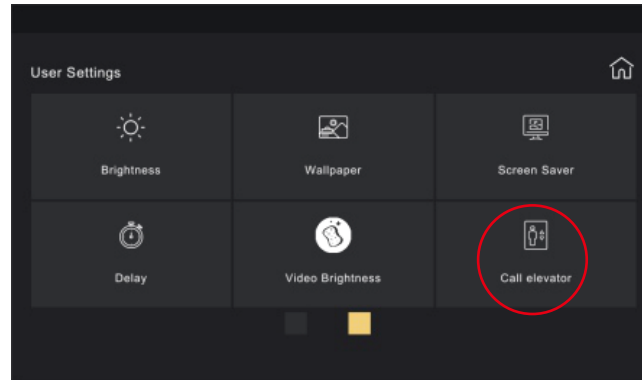


Lift control settings in monitor

User Settings → Call elevator → Enter the floor number of the apartment.


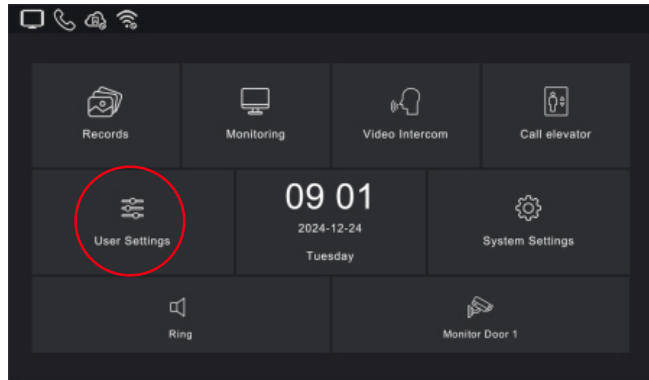


1 Lift and 1 outdoor station connection diagram

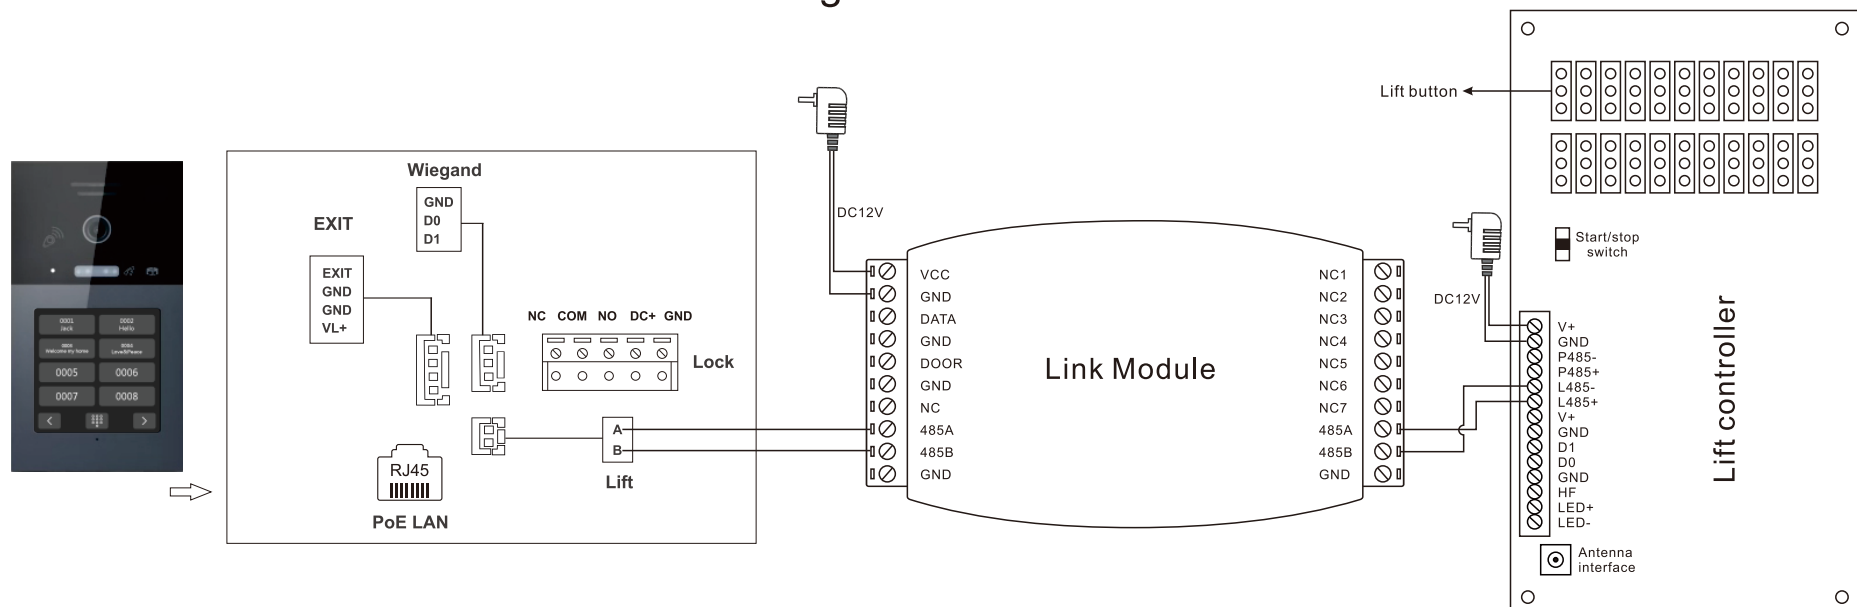

3 Lift and 3 outdoor station connection diagram

Door station 1

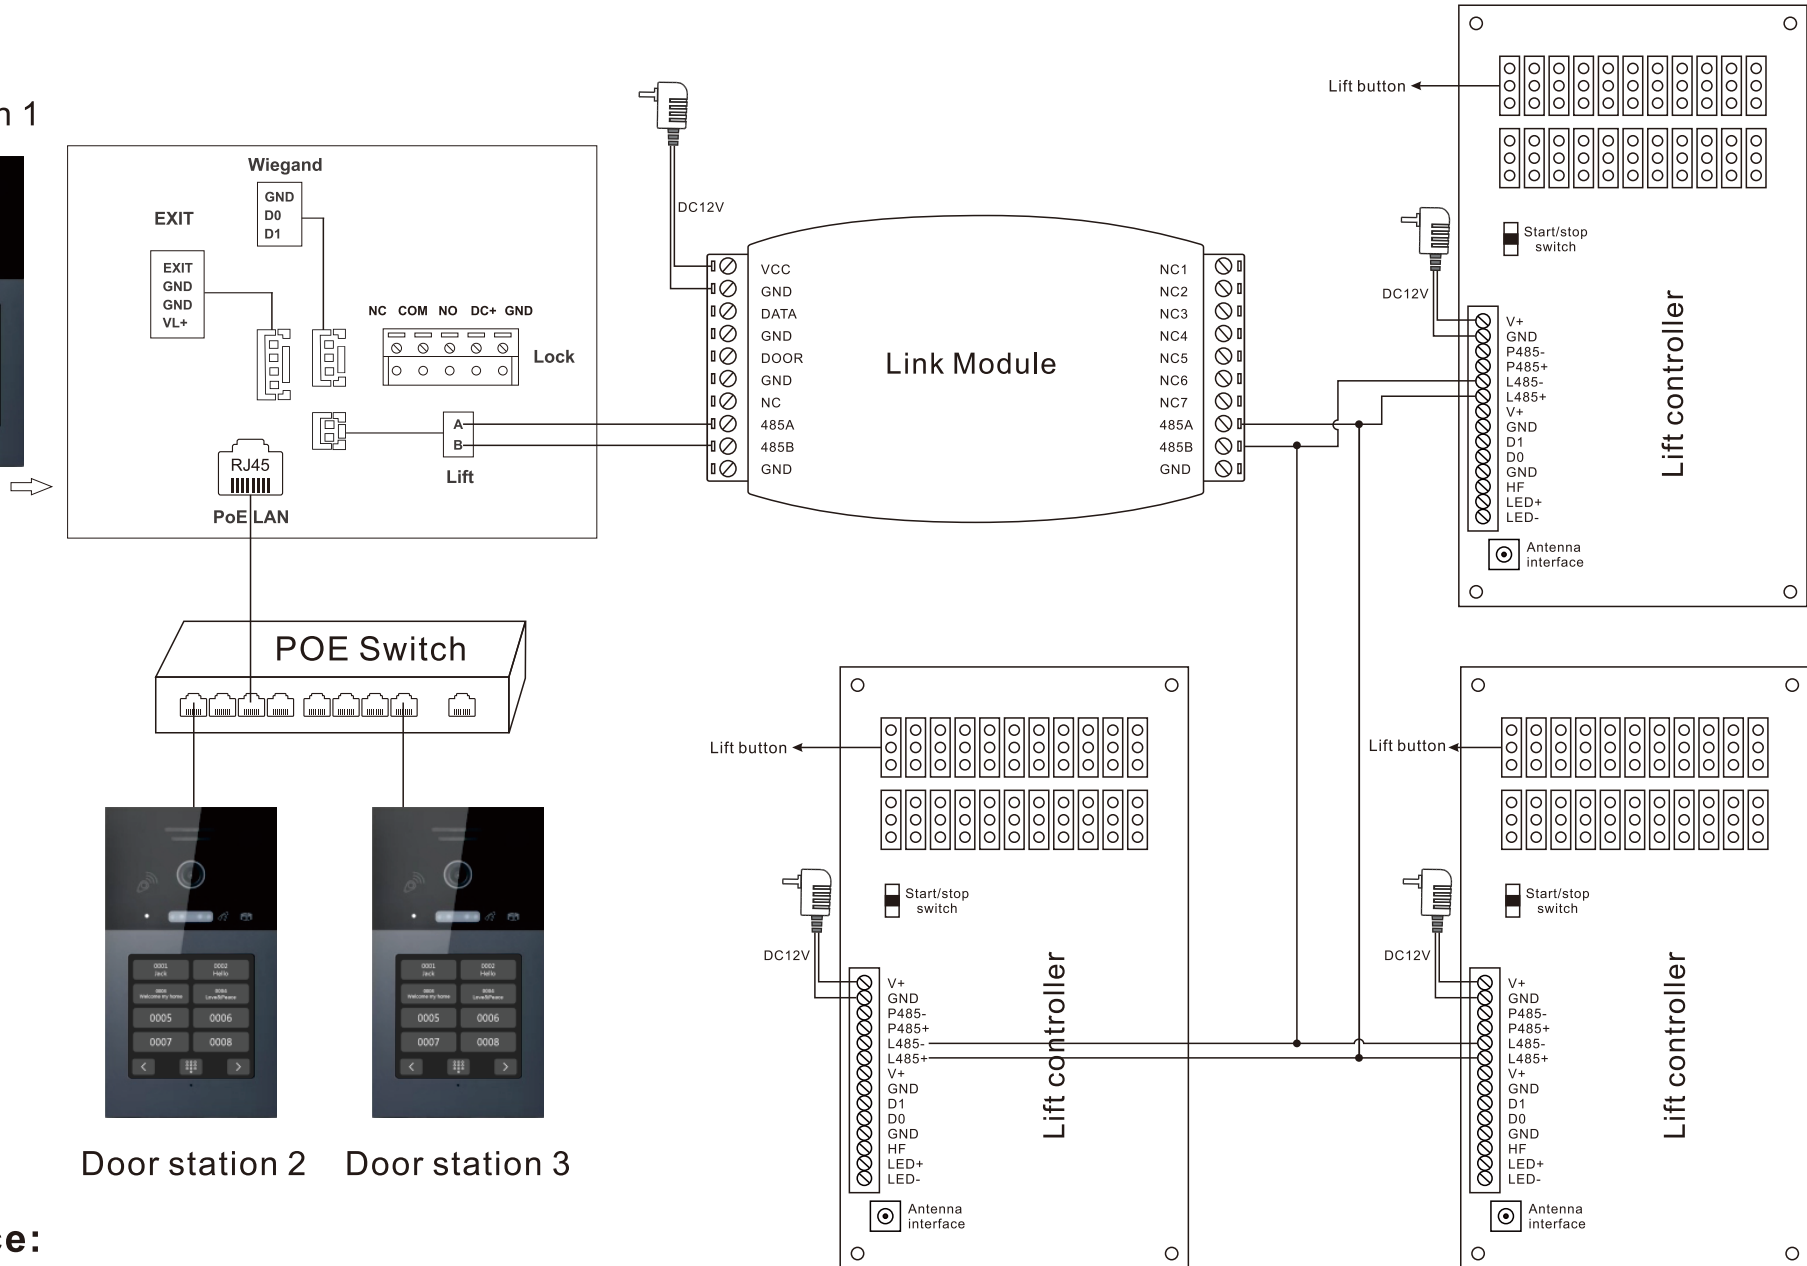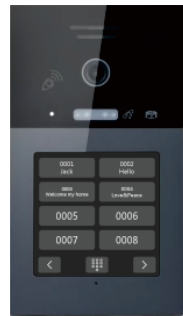

Door station 2 Door station 3



Notice:

Link module must connect to door station 1.

The default relay activation time is 6 seconds. Please consult your supplier to modify if requires.